



## SERIAL NUMBERS, FIRMWARE AND SOFTWARE VERSIONS

Face Mask Platen can be used only with the shown firmware & software vesions or later.

Please refer to the printer's user manual for checking your firmware version.

If update is required please contact your local support or fill in the following e-form here: polyprintdtg.com/support




Printer	Serial Numbers	Firmware	Software
	xxxxHHExxxx	1.5.05 or later	CMYK +4W 1.23 or later
	xxxxHFExxxx	2.50 or later	
	xxxxHGExxxx		2x CMYK 1.20 or later
TexJet <sup>®</sup> shortee <sup>2</sup>	All S/N	1.5.05 or later	CMYK +4W 1.20 or later
			2x CMYK 1.15 or later
	xxxxEBExxxx	Contact your local support or visit polyprintdtg.com/ support	CMYK +4W 1.96 or later
	xxxxFBExxxx		
	xxxxGCExxxx		
	xxxxGDExxxx		2x CMYK 1.37 or later
	xxxxGEExxxx		


## PLATEN SET UP OPTIONS



Use the Polyprint Face Mask Platen **only** with the two different options shown in diagram. Ensure the arrows are **facing inwards** the printer.


**Do not** combine installation options. Mask platens must be placed as shown. **Incorrect installation of plates may damage the printer.** 

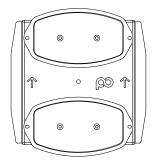

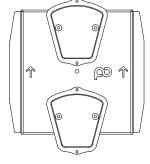


FLAT type option

FIT type option

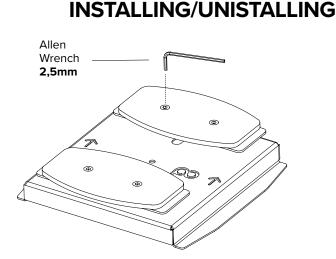



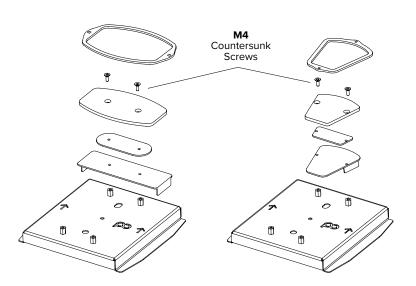

www.amayauk.com | 02392 590281 | sales@amayauk.com Head Office - Unit B1 Hazleton Interchange, Horndean, Hants PO8 9JU Midlands Showroom - Unit 4A-C East Bridgford Business Park, Kneeton Road, East Bridgford, Nottingham, NG13 8PJ